



DITCH MOUNT BRACKET

FOR NEXT-GEN RAPTOR / RANGER / EVEREST / SUPERDUTY

MARK
1

Open the bonnet and apply tape to mark the current position of the bonnet hinge.

This will ensure accurate alignment during reinstallation.




LOOSEN
2

Carefully **loosen** the two bonnet hinge nuts.

Do not remove the nuts.

Leave them threaded in slightly to support the hinge.

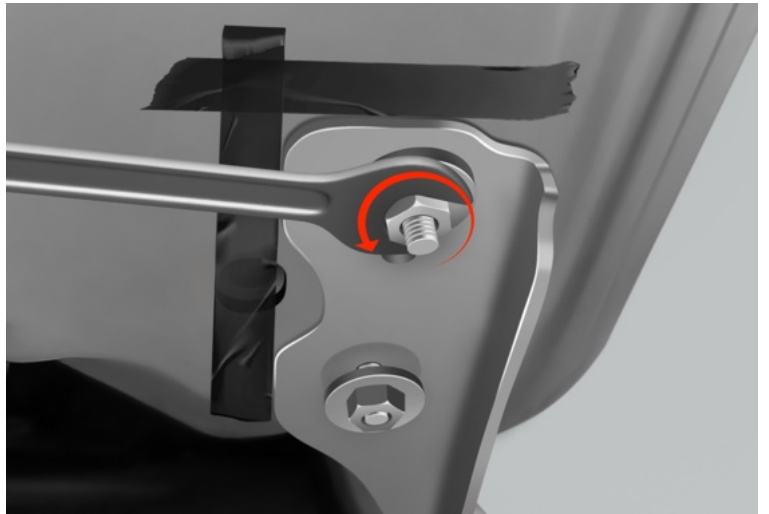


INSERT
3

Slide the ALTIQ™ Ditch Mount Bracket between the nuts and the hinge.

Do not install the bracket between the hinge and the bonnet as that will raise the bonnet height.

Ensure the bracket is flush and properly seated.

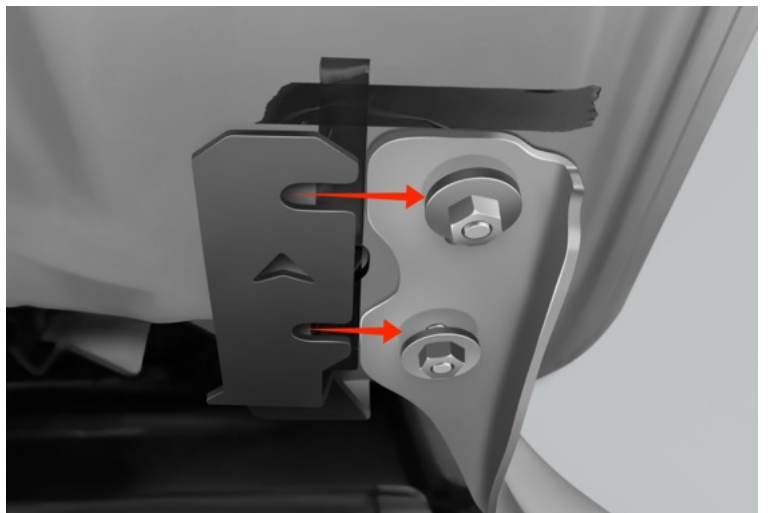

4

TIGHTEN

A. Realign the bonnet hinge with your tape markings. This is very important to get correct. Once you're sure, remove the tape.

B. Tighten the bolts securely to factory torque specification (or firmly if torque specs are unavailable).



5

MOUNT

Attach your ALTIQ™ Work Light to the Ditch Mount Bracket using the supplied bolts and washers.



6

SECURE

Manually adjust the angle of the work light to your desired position. Once satisfied, tighten using an Allen key to lock it in place.

