

ALTIQ

JIMNY (2018+) 32" LED LIGHT BAR KIT

The **ALTIQ™ 32" LED Light Bar Kit for Jimny (2018+)** skips the bull bar and skips the roof rack, giving you a clean, factory-fit look with elite-level light output. Engineered in-house from CAD to completion, this kit combines discreet, low-profile brackets with our class-leading Hybrid Tri-Optic Light Bar—delivering up to 10x the performance of stock high beams and offering true distance, flood, and clarity in one. No drilling. No compromise. Just ALTIQ-grade utility, installed in under 30 minutes.


FITTING THE JIMNY-SPECIFIC BRACKETS



1

LOCATE GRILLE RETAINERS:

Rotate each clip 90° to release. (Refer to the wide shot with

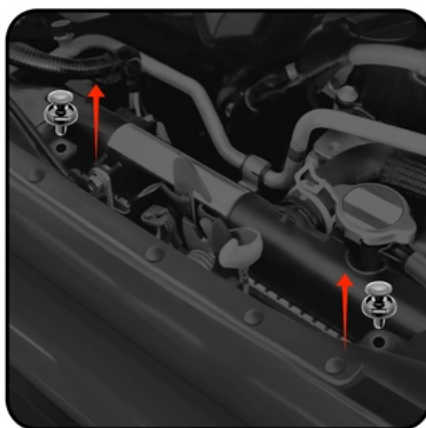

2

REMOVE ENGINE BAY CLIPS:

Pop the bonnet and locate the 2 x Phillips head clips underneath the grille.

Remove the 2 push clips on the top radiator support panel using a trim tool or flathead screwdriver




3

DETACH THE GRILLE:

Gently pull the grille forward away from the vehicle to disengage the clips.


Disconnect the indicator connectors before setting the

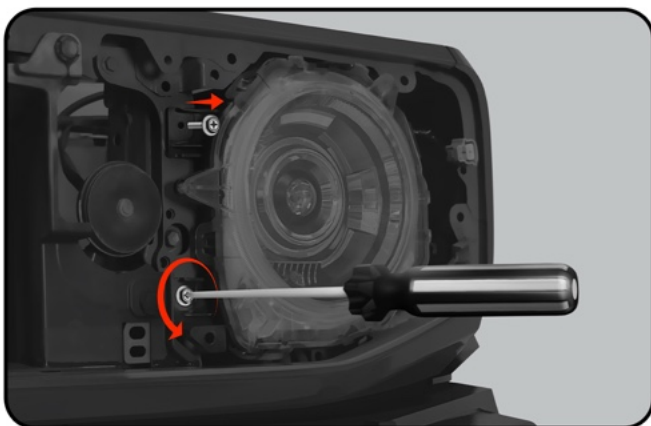

4

ACCESS THE HEADLIGHT SURROUNDS:

Locate the 2 screws next to each headlight (inside the body line). Remove both to prepare for bracket fitment.

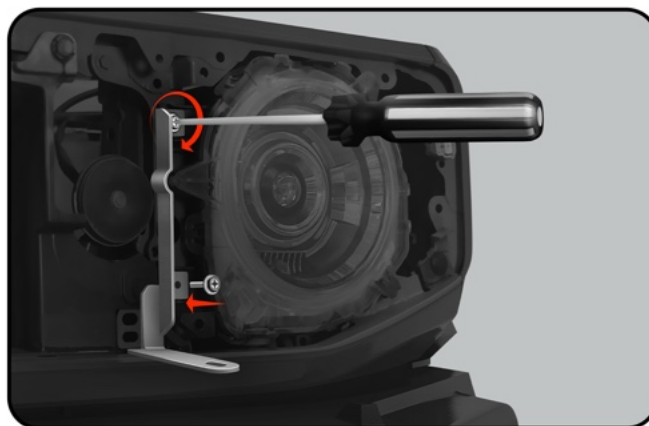

5


INSTALL ALTIQ BRACKETS:

Align your ALTIQ™ Jimny brackets with the screw holes and reinstall the previously removed screws to secure the brackets in place.

ALTIQ

JIMNY (2018+) 32" LED LIGHT BAR KIT


FITTING THE ALTIQ™ 32" LED LIGHT BAR [UNDERMOUNT BRACKETS]

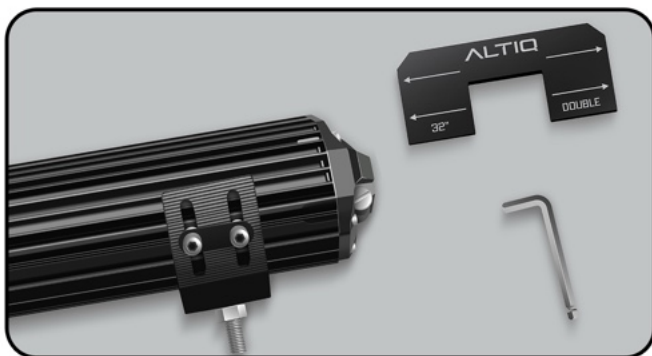

1

PREPARE THE BRACKETS:

Attach the rear under-mount brackets to the light bar with the bolts left loose.

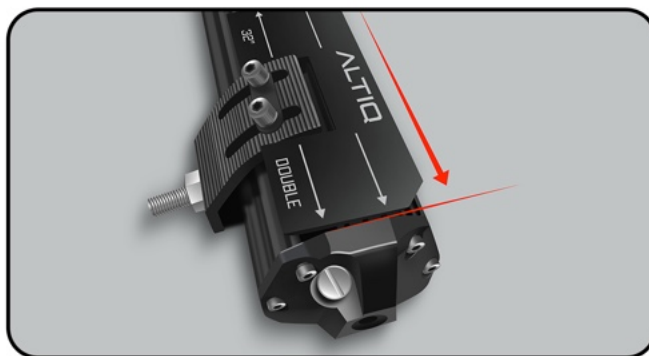

2

USE BRACKET GUIDE FOR ALIGNMENT:


Slide the bracket alignment tool over the light bar bracket, making sure the printed lines line up with the light bar's end housing.



3

SET FINAL BRACKET POSITION:

Slide the bracket toward the edge of the bar, and once aligned with the guide tool, push it up to meet the marked position.

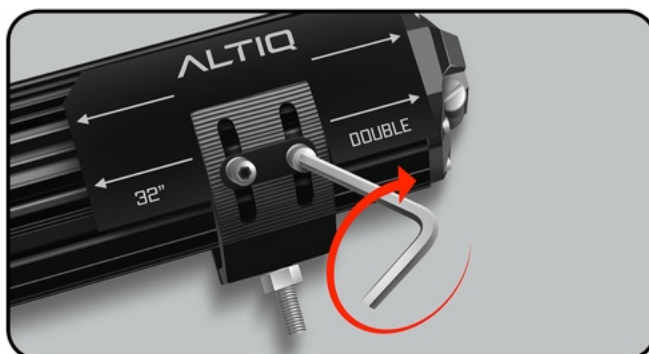

4

SECURE THE BRACKETS:

With the position locked in, tighten the bracket bolts using the supplied Allen key.



5

REPEAT FOR OPPOSITE SIDE:

Mirror the above steps to fit the bracket on the other end of the light bar.



6

MOUNT LIGHTBAR TO VEHICLE:

Align the light bar with your Jimny brackets and fasten using the stainless steel hardware provided. Double-check clearance and alignment.

SALES@ALTIQ.COM.AU | (03) 9071 2990
ALTIQ.COM.AU