



GEN 3

D-MAX

STEALTH KIT

INSTALL GUIDE



ALTIQ



ISUZU GEN3 D-MAX STEALTH KIT BRACKET INSTALL GUIDE


Congratulations on investing in the future of lighting and unparalleled vision. The ALTIQ™ bracket is engineered with maximum compatibility in mind, with a no compromise design to cooling, fitment and function.



1

A. Disconnect the ground terminal on the battery for your safety and to avoid any electrical issues (error codes etc).

B. Pop the centre caps of the 7 highlighted plastic clips with a trim tool or flathead screwdriver, remove the clips, then lift the now loose plastic shroud off the car.

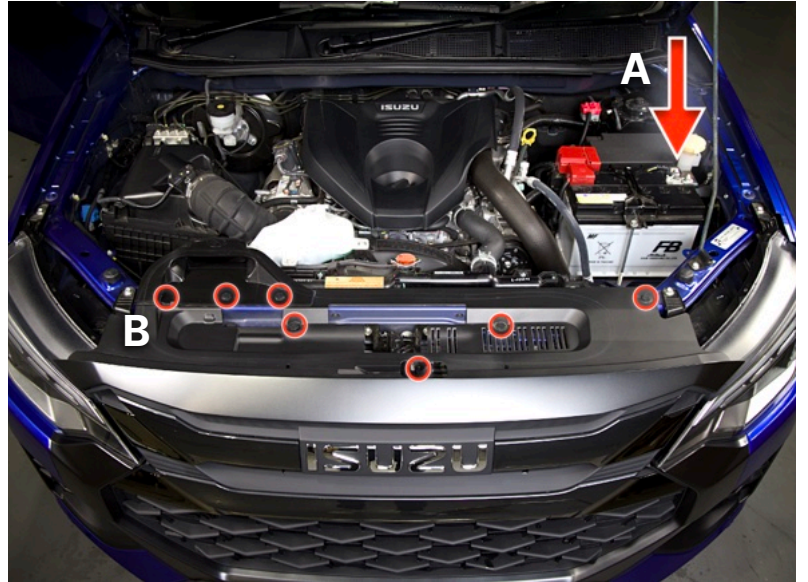

2

A. Under the plastic shroud, there are three more clips along the top; remove them.

B. Underneath the bumper, there are six around the outer edges and one beneath each of the lower plastic panels in front of the recovery points

C. Continue around to the wheel arches and you'll find three more clips on each side, two smaller ones with a larger one at the top.

D. Once all these clips are removed, we can move back under the vehicle and remove the two nuts located at the front of each wheel well.




3

A. With all clips and bolts removed, gently unclip the bumper from both sides and begin to pull it forward.

⚠ BE CAREFUL:


B. On the passenger side, there are two electrical plugs still connected. Simply **unclip both plugs** and the bumper is now free to be removed fully.

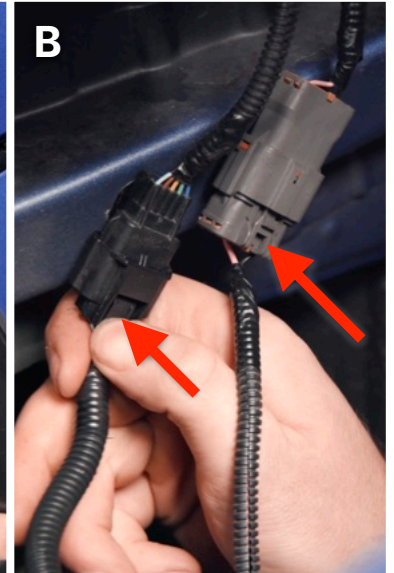

4

A. Remove the factory clips on either side of the front support beam.



B. Remove the two lower bolts from the centre support.

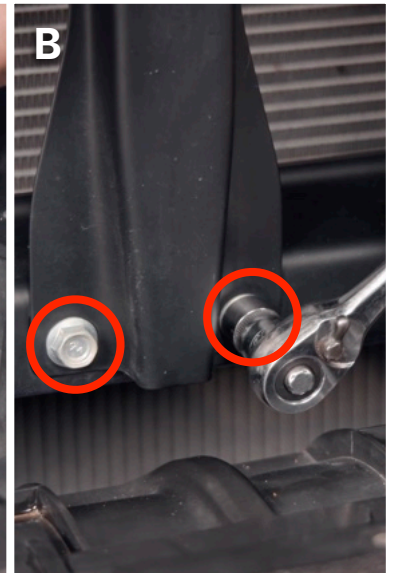

5


A. Remove the nut shown on the centre support next to the sensor. Leave the upper nut.

B. Remove the sensor from the support by squeezing the plastic tabs on the inside with a pair of long nose pliers.

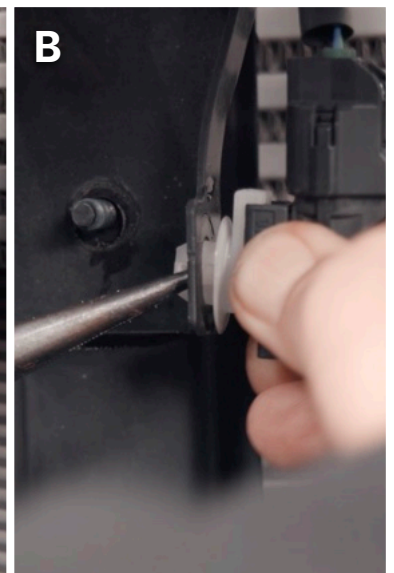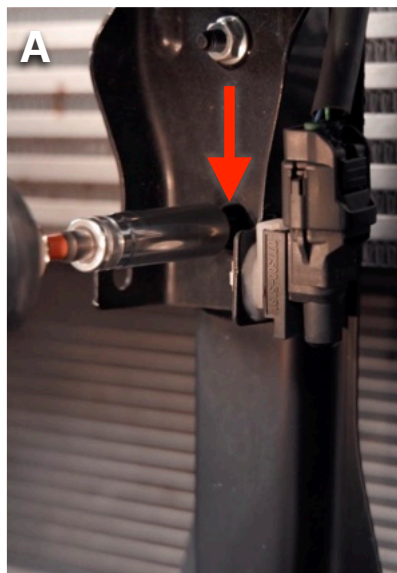

6


Now slide the ALTIQ bracket into position, ensuring it's aligned correctly with the factory bolt holes we removed on the centre support beam.

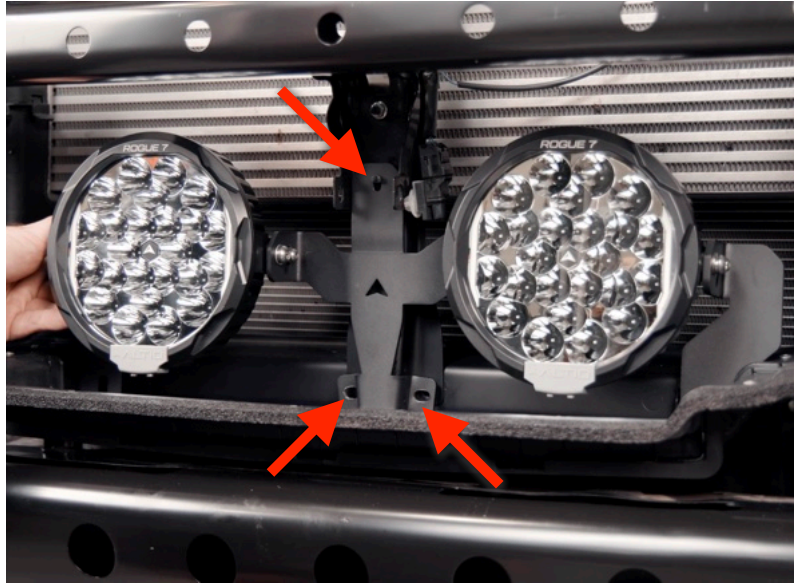

7


A. Reinstall the nut on the centre beam as shown, and clip the sensor back in to it's mount.

B. Finish by securing each end using the included hardware provided in your kit.

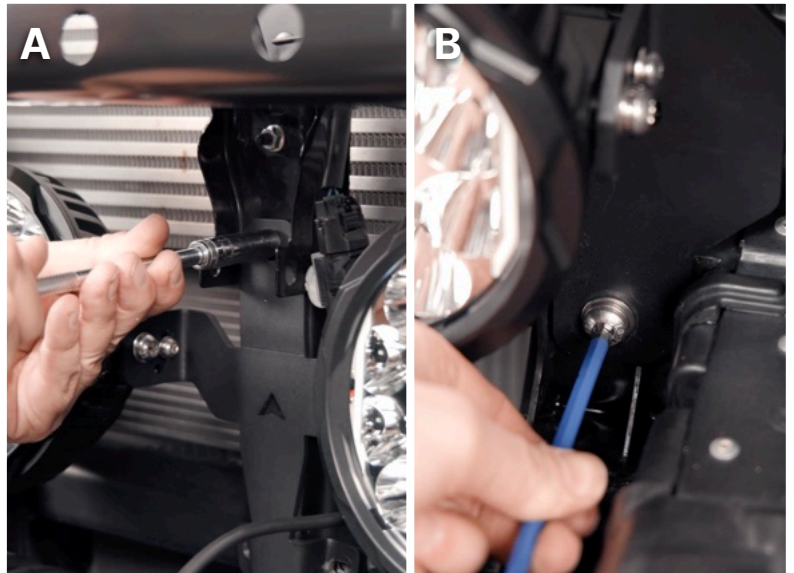

Well done!
Your install should look like this.

From here, simply follow the remaining steps in reverse to put your bar back on.

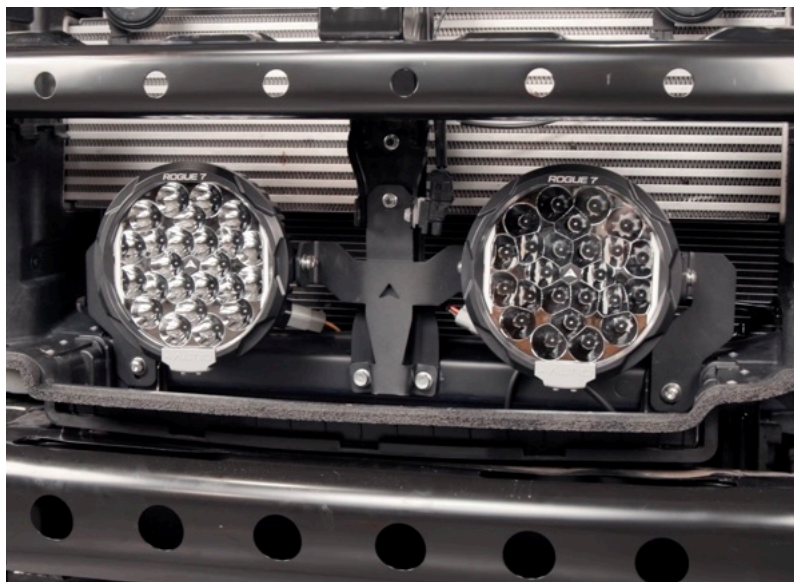



ILLUMINATE THE UNCHARTED_

ALTIQ.COM.AU
SALES@ALTIQ.COM.AU
03 9071 2990